

DISHWASHER INSTRUCTIONS

Startup

1. **Close Tank Drain Lever** - curved flipper lever inside d/w next to sink - must be in down position to fill tank
2. **Check that Basket & Screens are in Place**
3. **Add Dry Soap** - 1/2 cup from under triple sink - pour in strainer inside d/w near back
4. **Close Lid**
5. **Turn on Fan** - switch on wall to left
6. **Turn On D/W Switch** - black switch on front of control box near floor - to fill and warm tank water to above 150°F (about 10 min)
7. **Open then Close Lid** - starts cycle, run 3 cycles to preheat
8. **Rinse Heavily Soiled Dishes in Sink**
9. **Open Lid & Insert Tray of Dishes**
10. **Close Lid to Wash** - takes about 1 minute for a cycle
11. **Remove Tray of Dishes** - to dry on side table
12. **Repeat** - Steps 7 - 11 as needed

-IMPORTANT- Wait at least 2 minutes between loads for water to reheat. Failure to wait will result in greasy, unsanitary dishes!

Shutdown

13. **Turn off D/W Switch** - when done washing
14. **Turn off Fan** - (see #2 above)
15. **Open Tank Drain** - pull lever up to drain tank (see #1 above)
16. **Clean Tank Bottom, Basket & Screens**
17. **Leave Lid Open** - to dry